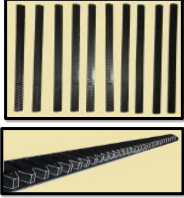 
 
 
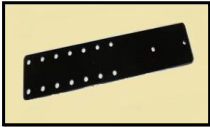 
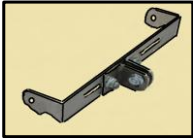 
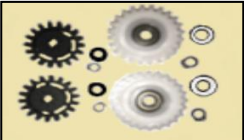 
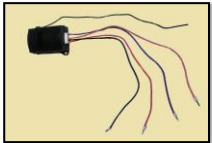 
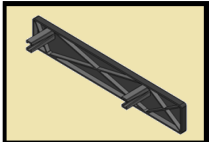 
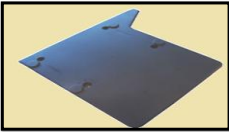 
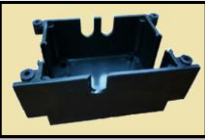 
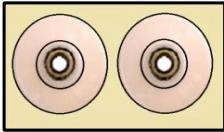 


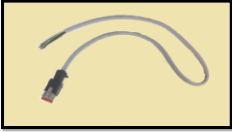 
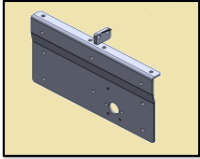 
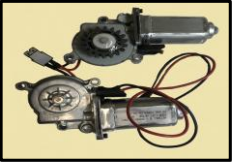 
 
 
CommandLIFT-6 General Parts List. The Version-6 product came online on January 1st, 2019. For older versions before this date, contact Tech Support at Whiting 716-542-5427 Ext. 1154

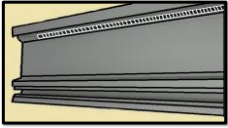 
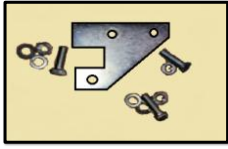 
	Whiting Part Number	Description	Special Notes
1	17024	 Linear Rack Repair Kit. 10 Pieces	Mounted in the CommandLIFT track.
2	17030	 Turn Buckle Assembly	Connects the motor unit to the door's connector plate.
3	17031	 Motor Unit Slides (Four Piece Kit)	The motor unit floats on these slides within the CL track.
4	17032	 Face Plate	This part is associated with Cold Saver, Temp Guard, and the Hinged Truss II doors. It's optional on other dry freight doors.
5	17033	 Emergency Release Access Cover	Located on Motor Unit
6	17035	 Magnet	Attached to the yellow curly cable that moves with the motor unit.
7	17054	 Mounting Plate Extension Pair for TempGuard Door Applications Only	Pair of extension plates located under the door connector plate. For Temp Guard doors only.
8	17061	 Header Connector Bracket	This bracket connects the CL track to the header via the balancer bracket.

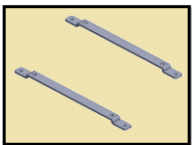 
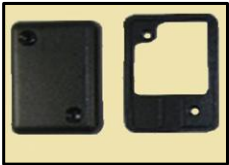 
	Whiting Part Number	Description	Special Notes
9	17064	 CL-6 Motor Unit	The main driver of the CL.
10	17077	 Emergency Cable Kit	The system allows the door to be opened manually when released.
11	17092	 Sensor Track Switches for Open/Close Positions	These are magnetic Reed switches located in the roof track.
12	17095	 Motor Replacement Gear Kit	This kit is the gear train that is associated with the two motors.
13	17096	 Main Circuit Board	Main circuit mother board located within the control box.
14	17134	 Motor Unit Bushing Set (Set of four)	These four bushings support the motor unit chassis to the yellow housing.
15	17140	 Two Button FOB	Programming to the CommandLIFT radio receiver will be needed.
16	17141	 Wireless Receiver. Pop-Locks Model: RC-HF3	Wireless radio receiver that receives the FOB or key pad signals to activate the door. Located in the control box.

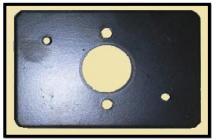 
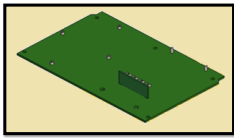 
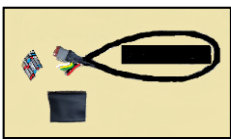 
	Whiting Part Number	Description	Special Notes
17	17145	 Track Sensor Clamp	These clamps secure the sensor switches in the side of the CL track.
18	17146	 Motor Puller Bracket with Rollers	This part is located on the door end of the motor unit that the turn buckle fastens to.
19	17148	 12 to 32 Volt Step Up Converter	Steps up the 12-volt battery voltage to 32-volts to operate the motor unit. Located within the control box.
20	17151	 Wireless Wall Switch	Accessory item. Works with the RC-HF3 Pop Locks Module (#17141).
21	17159	 Track End Cap	Located on the cab-end of the CL track.
22	17162	 Steel Gear Kit-Metal drive Gears (2) for Both Motors	Part of the motor unit's drive gears.
23	17163	 Plastic Gear Kit-Driven Gears Two for Both Motors with Hardware	Located on the motor unit.

	Whiting Part Number	Description	Special Notes
24	17164	 Cable Drive Cover-Supplied with Four M4x16mm Screws	Make sure to replace the zip-tie that holds the yellow electrical cable tucked under the lip of this cover.
25	17170	 Emergency Lock Cylinder with Key Pair	Can be purchased seperately from #17077 kit. Each key-pair is mated with a cylinder.
26	17171	 Lock cover	Can be purchased seperately from #17077 kit. Located on the outside of the door. Covers the lock cylinder.
27	17172	 Standard Emergency Unlocking Cable	Emergency release cable. This cable can be purchased separately from the release kit #17077.
28	17173	 Front Buffer Cover	Located on the door-end of the motor unit.
29	17174	 Empty Motor Unit Box With Four M4 x 16 Screws	Located on motor unit.
30	17178	 Guiding Wheel Pair	Located on the motor unit.
31	17179	 Clevis End	Part of turnbuckle.

	Whiting Part Number	Description	Special Notes
32	17180	 8-Pin Auxiliary Cable	This comes standard with all new CommandLIFTs.
33	17182	 Two Tab Steel Connector Plate	This part is bolted to the inside face of the top panel of the door. Note: Back tab will have to be cut off on dry freight applications.
34	17186	 Motor Pair	Part of the motor unit assembly.
35	17189	 Tube. Part of Motor Unit	This part is located in the motor unit chassis.
36	17191	 POP Locks Vertical Key Pad Transmitter. Surface Mounted HD009-B	Accessory Item. Pop Locks Model: HD009-B
37	17192	 Pop Locks Vertical Key Pad Transmitter Flush Mounted HD008-B	Accessory Item. Pop Locks Model: HD008-B
38	17603	 Track Assembly with switches, covers, end caps, and yellow cable harness. 143-inch track	Full track assembly with no motor unit.

	Whiting Part Number	Description	Special Notes
39	17604	 CommandLIFT bare track with tooth rack only. 143-Inch	Bare track.
40	17606	 Track Harness Assembly	Track harness assembly.
41	17607	 Sensor Wire Trim Kit. Two Pieces of 480mm and 1000 mm	Track trim.
42	17609	 Output Harness-70 Foot. Two Parts With Splice Kit	Standard output electrical harness.
43	17610	 Solder Butt Connection Kit- for output cable	Splice kit for output cable.
44	17612	 Center Balancer Bracket with Hardware	Mounted to spring balancer shaft.
45	17613	 Control Box Assembly	Whole control box assembly.

	Whiting Part Number	Description	Special Notes
46	17614	 Empty Control Box Including Receptacles	Control box housing. No internal electronics.
47	17616 OBSOLETE NO REPLACEMENT	 Control Box Mounting Brackets for early CL-6 systems. 2019 and 2020	This mounting bracket pair kit is for early CommandLIFT-6 systems. This kit is no longer available with no replacement.
48	17619	 Input Battery Cable 8- Foot, Fuse, fuse wire, butt connectors included	Standard input battery harness.
49	17622	 Warning Sticker	Label should be located just above the door handle above the pull strap.
50	17623	 Warning Sticker	Warning Label
51	17625	 Input Battery Cable 16 Foot-Fuse, fuse wire, butt connector	Accessory item
52	17626	 Release Cable Cover and Base	These two parts are part of the emergency release system. These can be purchased separately from the release kit 17077.

	Whiting Part Number	Description	Special Notes
53	17627	 Release Cable Mounting Bracket	This part is mounted on the connector plate during installation. It anchors the release cable to the connector plate. Can be purchased separately from the release kit 17077.
54	17628	 Interior Mounting Plate for the Release Cable	Part of the emergency release system. This can be purchased separately from the release kit 17077.
55	17629	 Output Harness 32 Foot. Two Parts With Splice Kit	Accessory item.
56	17630	 Mount Board in Control Box	This board is located within the control box.
57	17632	 Accessory Input Cable	Special short input cable with male connector and female pins. Used to splice with exiting cables.
58	17633	 Accessory Output Cable	Special short output cable with male connector with female pins. Used to splice with exiting output cables.
59	7427	 Whiting Easy-Up Spray Lubricant	Whiting Easy-Up spray lubricant. Used for PM services on the door.

	Whiting Part Number	Description	Special Notes
60	Non Applicable	 12-Volt A23 FOB Battery	The A23 12-volt battery used for keypads and key FOBs. Whiting does not sell these but can be purchased at Lowes or Home Depot or any battery retailer.
CommandLIFT Whole Systems			
61	17660-1	 Dry Freight CommandLIFT	Can be shipped parcel or LTL for multiple units. Box dimensions (inches) LxWxH 74 x 14 x 6.25. Weight: 70 Lbs.
62	17661-1	 Insulated CommandLIFT	Can be shipped parcel or LTL for multiple units. Box dimensions (inches) LxWxH 74 x 14 x 6.25. Weight: 70 Lbs.
63	17662-1	 Hinge Truss II CommandLIFT	Can be shipped parcel or LTL for multiple units. Box dimensions (inches) LxWxH 74 x 14 x 6.25. Weight: 70 Lbs.